


VW Transporter T5 / Multivan

Lamp Carrier 60 / Lampenträger 60



FITTING INSTRUCTIONS

Montageanleitung • Instructions de montage
Instrucciones de montaje • Manual

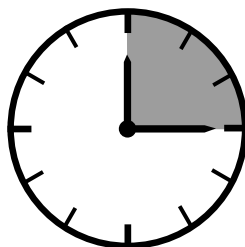

15 Minuten

Artikel-Nr:

151 4003 Stainless Steel
151 5003 Steel black
151 9003 Mounting Set

Revision I: 13.10.2010




VW Transporter T5 / Multivan

Lamp Carrier 60 / Lampenträger 60

Required tools / Benötigte Werkzeuge / Outillage requis / Herramientas necesarias

SW: 13 mm

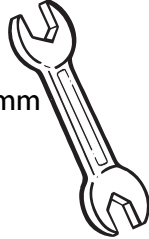

M8: 25 Nm



Parts list / Teileliste / Lista de accesorios

1 Ø 60; 151 4003.I (151 5003.I)










**Mounting set 151 9003 /
Montagesatz 151 9003**

2 1515026R / 1515027L








Standard Parts list / Normteileliste

a		M8x25; DIN 912	2x
b		M8x25; DIN 933	2x
c		Ø8; DIN 127	4x
d		Ø8,4; DIN 125	2x
e		Ø8,4; DIN 9021	2x
f		Inden Nr. SRL 21 black	2x
g		Inden Nr. SRL 28 black	2x

Artikel-Nr:

151 4003 Stainless Steel
151 5003 Steel black
151 9003 Mounting Set

Revision I: 13.10.2010

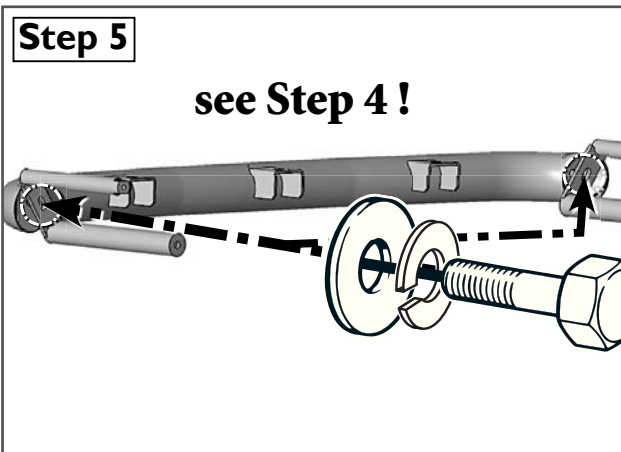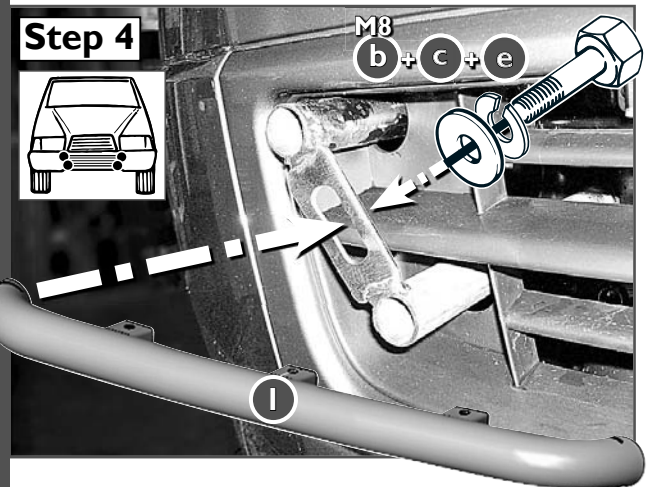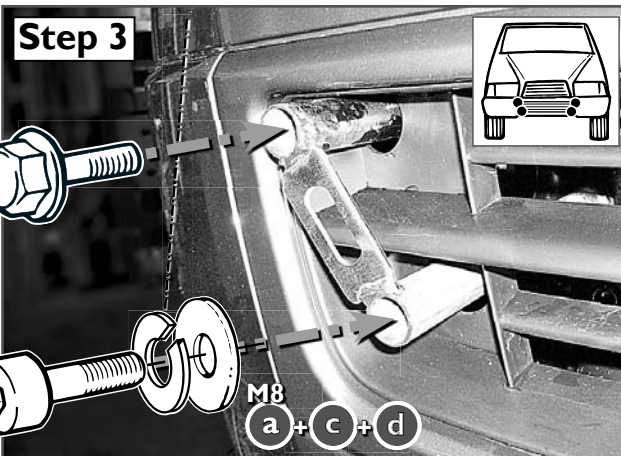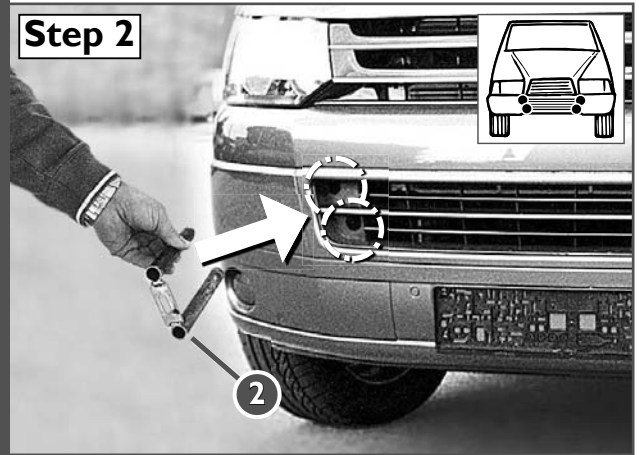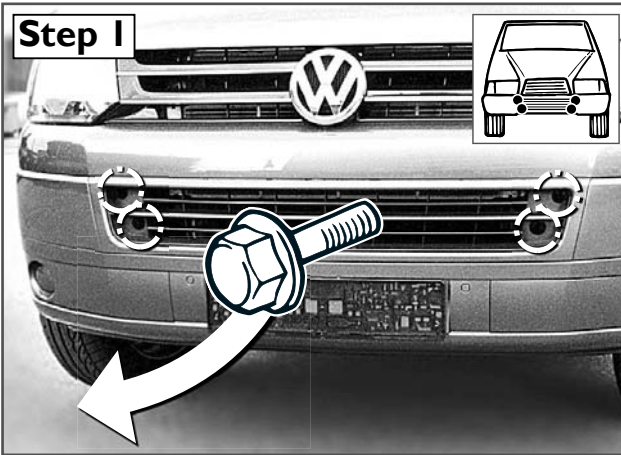

Artikel-Nr:
151 4003 Stainless Steel

Revision I: 13.10.2010



www.antec-online.de

page/Seite 3